

How to Change the Ring Tones on Your Phone

1. Press the settings button on the phone.
2. When the LCD screen gives you a menu, press the down arrow button to highlight the 'Ring Type'.
3. Press the select button.
4. Only two choices show. That is really the two lines on lines on your phone. You can set each line to have a different ring type.
5. Keep the first line highlighted, press the select button. Now you see several types of ring tones. You can scroll down thru them with the up and down arrow.
6. If you see one you would like to hear, press the play button.
7. When you find one you like, press the select button then press the OK button. It will take you back to the two lines menu screen.
8. Now you can change the tone on the second line.
9. Press the down arrow so the second line is highlighted.
10. Press the select button. Different ring types appear on the LCD screen.
11. Go thru the same procedure as above by using the up and down arrows, playing the tone till you hear one you like.
12. Press the select button then press the OK button and you go back to the two lines menu screen.
13. Press the exit button two times to get back to the original screen.